

Accessory Options





ACCESSORIES for Your THS Workstations:

Our assortment of accessories easily integrate with your THS workstations. The THS modular system is adaptable to your changing work flow needs and this also applies to your use of accessories. Configure and reconfigure to your hearts content in order to optimize functionality of your space and accelerate your productivity.

Accessory Categories:

Shelves
Drawers and Cabinets
Locking Casters
Lighting
Power Strips
Network Patch Panels
Monitor Arms
CPU Trays
Tote Bar and Totes

Shelves:

Fixed and Slide-Out shelving options with standard widths of 24", 30", 36" and 48" with an assortment of depths available. Shelf Restraint Brackets available for reinforcement/safety purposes.

Drawers and Cabinets:

Drawer options are: one 6"; 2 ea. 6"; one 6" and one 12"; four ea. 3" and one 12" drawer with lock set. Attaches to underside of the Benchtop. Locking Flipper Cabinets are designed with mounting teeth to correspond to the 24", 30" or 36" workstation upright notches. Design integrates with THS workstations and can be configured and reconfigured depending on workspace and workflow requirements.

Casters:

Casters with locks for total immobility. Non-locking swivel also available. Made from heavy gauge cold rolled steel and features double ball raceways for added strength and long service life. Zinc plated for a corrosion resistant finish. Number of casters required relates to configuration of the THS Module Workstation.

Lighting:

There are two options for lighting: Option 1. Under shelf lighting comes as a LED light in a sleek aluminum housing that attaches to the underside of THS shelves with magnets. Option 2. Workshop style LED fixture that attaches to a "Light Task Bar" which mounts to the THS uprights on the workstation. Light Task Bar is sized to the total width of the workstation. Choices are 48", 60" 72" and 96".

Power Strips:

Power strips come in a 1U configuration that mounts into our THS data com bracket that in turn mounts to the workstation uprights. The bracket must be sized to the minimum module size of your workbench, 24". 30", 36" or 48". Brackets can come with a 1U or 2 U openings. You may specify a power strip at either 15 amps or 20 amp capacity. Both types come with a 12-socket capacity, the sockets are configured with 6 facing forward and 6 on the backside of the strip. Metered or non-metered.



Customizable Modular Workstation and Server Rack Solutions

Network Patch Panels:

Network Patch Panels come in a 1U or 2U configurations that mounts into our THS data com bracket that in turn mounts to the workstation uprights. The bracket must be sized to the minimum module size of your workbench, 24". 30", 36" or 48". Brackets can come with a 1U or 2 U openings. You may specify Network Patch Panel at 12, 24, 36 or 48 connection capacity. Select the one that best fits your needs.

Monitor/Monitor Arm Brackets:

Monitor and Monitor Arm Brackets come in several designs and easily integrate with THS style workstations. Bracket selection is based on your THS module width and the monitor/monitor arm required specifications.

CPU Tray/Shelf:

CPU Trays come in several flavors, for them to easily mount to the THS style workstation, the proper bracket for the particular tray is required. Brackets also need to be the proper size based on your THS module width. Choose Module width then the type of bracket needed.

Tote Bars and Totes:

Tote bars are brackets attached to the workstation uprights that can hold totes of various sizes and type.

The totes are used to hold components that are being used in an assembly at the workstation. This allows the worker to focus on the work at hand and not have to go looking for components. Choose Tote bar by total length of the workstation; 48", 60", 72", or 96". Tote choice is based on the user requirements.

If you are not sure what you want or need, we are happy to be of assistance.



